
VRV II Outdoor-Air Processing Unit

MODELS

Ceiling-mounted Duct type**FXMQ125MFV1****FXMQ200MFV1****FXMQ250MFV1**

READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION.
KEEP THIS MANUAL IN A HANDY PLACE FOR FUTURE REFERENCE.

LESEN SIE DIESE ANWEISUNGEN VOR DER INSTALLATION SORGFÄLTIG DURCH.
BEWAHREN SIE DIESE ANLEITUNG FÜR SPÄTERE BEZUGNAHME GRIFFBEREIT AUF.

LIRE SOIGNEUSEMENT CES INSTRUCTIONS AVANT L'INSTALLATION.
CONSERVER CE MANUEL A PORTEE DE MAIN POUR REFERENCE ULTERIEURE.

LEA CUIDADOSAMENTE ESTAS INSTRUCCIONES ANTES DE INSTALAR.
GUARDE ESTE MANUAL EN UN LUGAR A MANO PARA LEER EN CASO DE TENER
ALGUNA DUDA.

PRIMA DELL'INSTALLAZIONE LEGGERE ATTENTAMENTE QUESTE ISTRUZIONI.
TENERE QUESTO MANUALE A PORTATA DI MANO PER RIFERIMENTI FUTURI.

ΔΙΑΒΑΣΤΕ ΠΡΟΣΕΚΤΙΚΑ ΑΥΤΕΣ ΤΙΣ ΟΔΗΓΙΕΣ ΠΡΙΝ ΑΠΟ ΤΗΝ ΕΓΚΑΤΑΣΤΑΣΗ ΕΧΕΤΕ ΑΥΤΟ
ΤΟ ΕΓΧΕΙΡΙΔΙΟ ΕΥΚΑΙΡΟ ΓΙΑ ΝΑ ΤΟ ΣΥΜΒΟΥΛΕΥΕΣΤΕ ΣΤΟ ΜΕΛΛΟΝ.

LEES DEZE INSTRUCTIES ZORGVULDIG DOOR VOOR INSTALLATIE. BEWAAR DEZE HAN-
DLEINDING WAAR U HEM KUNT TERUGVINDEN VOOR LATERE NASLAG.

LEIA COM ATENÇÃO ESTAS INSTRUÇÕES ANTES DE REALIZAR A INSTALAÇÃO.
MANTENHA ESTE MANUAL AO SEU ALCANCE PARA FUTURAS CONSULTAS.

ПЕРЕД НАЧАЛОМ МОНТАЖА ВНИМАТЕЛЬНО ОЗНАКОМЬТЕСЬ С ДАННЫМИ
ИНСТРУКЦИЯМИ. СОХРАНИТЕ ДАННОЕ РУКОВОДСТВО В МЕСТЕ, УДОБНОМ ДЛЯ
ОБРАЩЕНИЯ В БУДУЩЕМ.

安装前务必仔细阅读此安装说明书，阅后妥善保存，以便随时参看。

English

Deutsch

Français

Español

Italiano

Ελληνικά

Nederlands

Portugues

Russian

Chinese

CE - DECLARATION OF CONFORMITY
CE - KONFORMITÄTSEKTLÄRUNG
CE - DECLARATION DE CONFORMITE

CE - CONFORMITEITSVERKLARING
CE - DECLARACION DE CONFORMIDAD
CE - DICHIARAZIONE DI CONFORMITA'

CE - ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ
CE - DECLARAÇÃO DE CONFORMIDADE
CE - OPFYLDELSESERKLÆRING

CE - FÖRSÄKRAN OM ÖVERENSTÄMMELSE
CE - ERKLÆRING OM SAMSVAR
CE - ILMOITUS YHDENMUKAISUUDESTA

DAIKIN INDUSTRIES, LTD.

declares under its sole responsibility that the air conditioning models to which this declaration relates:
erklärt auf seine alleinige Verantwortung daß die Modelle der Klimageräte für die diese Erklärung bestimmt ist:
déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:

verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft:
declara baja su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:
dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione:

δηλώνει με αποκλειστική της ευθύνη ότι τα μοντέλα των κλιματιστικών συσκευών στα οποία αναφέρεται η παρούσα δήλωση:
declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere:
erklærer under eneansvar, at klimaanlægmodellene, som denne deklaration vedrører:

deklarerar i egenskap av huvudansvarig, att luftkonditioneringsmodellerna som berörs av denna deklaration innebär att:
erklærer et fullstendig ansvar for at de luftkonditioneringsmodeller som berøres av denne deklarasjon innebærer at:
ilmoittaa yksinomaan omalla vastuullaan, että tämän ilmoituksen tarkoitamat ilmastointilaitteiden mallit:

FXZQ20MVE, FXZQ25MVE, FXZQ32MVE, FXZQ40MVE, FXZQ50MVE
FXCQ20MVE, FXCQ25MVE, FXCQ32MVE, FXCQ40MVE, FXCQ50MVE, FXCQ63MVE, FXCQ80MVE, FXCQ125MVE
FXMQ40MVE, FXMQ50MVE, FXMQ63MVE, FXMQ80MVE, FXMQ100MVE, FXMQ125MVE, FXMQ200MVE, FXMQ250MVE
FXLQ20MVE, FXLQ25MVE, FXLQ32MVE, FXLQ40MVE, FXLQ50MVE, FXLQ63MVE
FXNQ20MVE, FXNQ25MVE, FXNQ32MVE, FXNQ40MVE, FXNQ50MVE, FXNQ63MVE
FXHQ32MVE, FXHQ63MVE, FXHQ100MVE
FXSQ20MVE, FXSQ25MVE, FXSQ32MVE, FXSQ40MVE, FXSQ50MVE, FXSQ63MVE, FXSQ80MVE, FXSQ100MVE, FXSQ125MVE
FXKQ25MVE, FXKQ32MVE, FXKQ40MVE, FXKQ63MVE
FXAQ20MVE, FXAQ25MVE, FXAQ32MVE, FXAQ40MVE, FXAQ50MVE, FXAQ63MVE
FXUQ71MV1, FXUQ100MV1, FXUQ125MV1
BEVQ71MVE, BEVQ100MVE, BEVQ125MVE
FXMQ125MFV1, FXMQ200MFV1, FXMQ250MFV1

are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:
der/den folgenden Norm(en) oder einem anderen Normdokument oder -dokumenten entspricht/entsprechen, unter der Voraussetzung, daß sie gemäß unseren Anweisungen eingesetzt werden:
sont conformes à la/aux norme(s) ou autre(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions:

conform de volgende norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies:
están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones:
sono conformi al(i) seguente(i) standard(s) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni:

είναι σύμφωνα με το(α) ακόλουθο(α) πρότυπο(α) ή άλλο έγγραφο(α) κανονισμών, υπό την προϋπόθεση ότι χρησιμοποιούνται σύμφωνα με τις οδηγίες μας:
estão em conformidade com a(s) seguinte(s) norma(s) ou outro(s) documento(s) normativo(s), desde que estes sejam utilizados de acordo com as nossas instruções:
overholder følgende standard(er) eller andet/andre retningsgivende dokument(er), forudsat at disse anvendes i henhold til vore instrukser:

respektive utrustning är utförd i överensstämmelse med och följer följande standard(er) eller andra normgivande dokument, under förutsättning att användning sker i överensstämmelse med våra instruktioner:
respektive utstyr er i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forutsetning av at disse brukes i henhold til våre instrukser:
vastaavat seuraavien standardien ja muiden ohjeellisten dokumenttien vaatimuksia edellyttäen, että niitä käytetään ohjeidemme mukaisesti:

EN60335-2-40,

following the provisions of:
gemäß den Vorschriften der:
conformément aux stipulations des:

overeenkomstig de bepalingen van:
siguiendo las disposiciones de:
secondo le prescrizioni per:

με τήρηση των διατάξεων των:
de acordo com o previsto em:
under iagttagelse af bestemmelserne i:

enligt villkoren i:
gitt i henhold til bestemmelsene i:
noudattaen määräyksiä:

Low Voltage 73/23/EEC
Machinery Safety 98/37/EC
Electromagnetic Compatibility 89/336/EEC*

Directives, as amended.
Direktiven, gemäß Änderung.
Directives, telles que modifiées.

Richtlijnen, zoals geamendeerd.
Directivas, según lo enmendado.
Direttive, come da modifica.

Οδηγιών, όπως έχουν τροποποιηθεί.
Directivas, conforme alteração em.
Direktiver, med senere ændringer.

Direktiv, med foretagne ændringer.
Direktiver, med foretatte endringer.
Direktiivejä, sellaisina kuin ne ovat muutettuina.

*Note as set out in the Technical Construction File **DAIKIN.TCF.022** and judged positively by **TNO** according to the **Certificate 0305020101**.
Hinweis wie in der Technischen Konstruktionsakte **DAIKIN.TCF.022** aufgeführt und von **TNO** positiv ausgezeichnet gemäß **Zertifikat 0305020101**.
Remarque tel que stipulé dans le Fichier de Construction Technique **DAIKIN.TCF.022** et jugé positivement par **TNO** conformément au **Certificat 0305020101**.

Bemerk zoals vermeld in het Technisch Constructiedossier **DAIKIN.TCF.022** en in orde bevonden door **TNO** overeenkomstig **Certificaat 0305020101**.
Nota tal como se expone en el Archivo de Construcción Técnica **DAIKIN.TCF.022** y juzgado positivamente por **TNO** según el **Certificado 0305020101**.
Nota delineato nel File Tecnico di Costruzione **DAIKIN.TCF.022** e giudicato positivamente da **TNO** secondo il **Certificato 0305020101**.

Σημείωση όπως προσδιορίζεται στο Αρχείο Τεχνικής Κατασκευής **DAIKIN.TCF.022** και κρίνεται θετικά από το **TNO** σύμφωνα με το **Πιστοποιητικό 0305020101**.
Nota tal como estabelecido no Ficheiro Técnico de Construção **DAIKIN.TCF.022** e com o parecer positivo de **TNO** de acordo com o **Certificado 0305020101**.
Bemærk som anført i den Tekniske Konstruktionsfil **DAIKIN.TCF.022** og positivt vurderet af **TNO** i henhold til **Certifikat 0305020101**.

Information utrustningen är utförd i enlighet med den Tekniska Konstruktionsfilen **DAIKIN.TCF.022** som positivt intygas av **TNO** vilket också framgår av **Certifikat 0305020101**.
Merk som det fremkommer i den Tekniske Konstruksjonsfilen **DAIKIN.TCF.022** og gjennom positiv bedømmelse av **TNO** ifølge **Certifikat 0305020101**.
Huom jotka on esitetty Teknisessä Asiakirjassa **DAIKIN.TCF.022** ja jotka **TNO** on hyväksynyt **Sertifikaatin 0305020101** mukaisesti.

DAIKIN


Yoshiaki Hirata
Manager Quality Control Department
Sakai, 1st of May 2004

DAIKIN INDUSTRIES, LTD.

Umeda Center Bldg., 4-12, Nakazaki-Nishi 2-chome,
Kita-ku, Osaka, 530-8323 Japan

CONTENTS

1. SAFETY CONSIDERATIONS..... 1
 2. BEFORE INSTALLATION 2
 3. SELECTING INSTALLATION SITE 3
 4. PREPARATIONS BEFORE INSTALLATION..... 4
 5. UNIT INSTALLATION 4
 6. REFRIGERANT PIPING..... 5
 7. DRAIN PIPING WORK 6
 8. INSTALLING THE DUCT 7
 9. ELECTRIC WIRING WORK 7
 10. WIRING EXAMPLE AND HOW TO SET THE REMOTE CONTROLLER..... 8
 11. FIELD SETTING 10
 12. TEST OPERATION..... 10

1. SAFETY CONSIDERATIONS

Please read these “SAFETY CONSIDERATIONS” carefully before installing the unit and be sure to install it correctly. After completing the installation, make sure that the unit operates properly during the start-up operation. Please instruct the customer on how to operate the unit and keep it maintained. Also, inform customers that they should store this installation manual along with the operation manual for future reference. This unit comes under the term “appliances not accessible to the general public”.

Safety Precaution

This unit is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Meaning of warning and caution symbols.

! WARNING Failure to observe a warning may result in death.

! CAUTION Failure to observe a caution may result in injury or damage to the unit.

! WARNING

- Ask your dealer or qualified personnel to carry out installation work. Do not try to install the unit yourself. Improper installation may result in water leakage, electric shocks or fire.
- Perform installation work in accordance with this installation manual. Improper installation may result in water leakage, electric shocks or fire.
- When installing the unit in a small room, take measures against to keep refrigerant concentration from exceeding allowable safety limits in the event of refrigerant leakage. Contact the place of purchase for more information. Excessive refrigerant in a closed ambient can lead to oxygen deficiency.
- Be sure to use only the specified accessories and parts for installation work. Failure to use the specified parts may result in water leakage, electric shocks, fire or the unit falling.
- Install the unit on a foundation strong enough to withstand the weight of the unit. A foundation of insufficient strength may result in the unit falling and causing injuries.
- Carry out the specified installation work after taking into account strong winds, typhoons or earthquakes. Improper installation work may result in the unit falling and causing accidents.

- Make sure that a separate power supply circuit is provided for this unit and that all electrical work is carried out by qualified personnel according to local laws and regulations and this installation manual. An insufficient power supply capacity or improper electrical construction may lead to electric shocks or fire.
- Make sure that all wiring is secured, the specified wires are used, and no external forces act on the terminal connections or wires. Improper connections or installation may result in fire.
- When wiring the power supply and connecting the remote controller wiring and transmission wiring, position the wires so that the electric parts box lid can be securely fastened. Improper positioning of the electric parts box lid may result in electric shocks, fire or the terminals overheating.
- If the refrigerant gas leaks during installation, ventilate the area immediately. Toxic gas may be produced if the refrigerant gas comes into contact with fire.
- After completing the installation work, check that the refrigerant gas does not leak. Toxic gas may be produced if the refrigerant gas leaks into the room and comes into contact with a source of fire, such as a fan heater, stove or cooker.
- Before touching electrical parts, turn off the unit.
- Do not directly touch the refrigerant leaked from refrigerant piping connections. Frostbite may be caused.

! CAUTION

- Ground the unit. Do not connect the ground wire to gas or water pipes, lightning rod or a telephone ground wire. Incomplete grounding may result in electric shocks.
- Be sure to install an earth leakage breaker. Failure to install an earth leakage breaker may result in electric shocks.
- While following the instructions in this installation manual, install drain piping in order to ensure proper drainage and insulate piping in order to prevent condensate. Improper drain piping may result in water leakage and property damage.
- Install the indoor and outdoor units, power supply wires and transmission wires at least 1 meter away from televisions or radios in order to prevent image interference or noise. (Depending on the radio waves, a distance of 1 meter may not be sufficient enough to eliminate the noise.)
- Remote controller (wireless kit) transmitting distance can result shorter than expected in rooms with electronic fluorescent lamps. (inverter or rapid start types) Install the indoor unit as far away from fluorescent lamps as possible.
- Do not install the unit in the following locations:
 - (a) where a mineral oil mist or an oil spray or vapor is produced, for example in a kitchen. Plastic parts may deteriorate and fall off or result in water leakage.
 - (b) where corrosive gas, such as sulfurous acid gas, is produced. Corroding copper pipes or soldered parts may result in refrigerant leakage.
 - (c) near machinery emitting electromagnetic waves. Electromagnetic waves may disturb the operation of the control system and result in a malfunction of the unit.

- (d) where combustible gas may leak, where there are carbon fiber or ignitable dust suspensions in the air, or where volatile liquid such as thinner or gasoline is handled.
Operating the unit in such conditions may result in fire.

2. BEFORE INSTALLATION

- **When moving the unit while removing it from the packing case, be sure to lift it by holding on to the four lifting lugs without exerting any pressure on other parts, especially, the refrigerant pipe and drain socket.**
- Be sure to check the type of R410A refrigerant to be used before installing the unit. (Using an incorrect refrigerant will prevent normal operation of the unit.)
- The accessories needed for installation must be retained in your custody until the installation work is completed. Do not discard them!
- Decide upon a line of transport.
- Leave the unit inside its packing case while moving, until reaching the installation site. Where unpacking is unavoidable, use a sling of soft material or protective plates together with a rope when lifting, to avoid damage or scratch to the unit.
- For the installation of an outdoor unit, refer to the installation manual attached to the outdoor unit.
- Do not install or operate the unit in the place mentioned below.
 - **Laden with mineral oil, or filled with oil vapor or spray like in kitchens. (Plastic parts may deteriorate which could eventually cause the unit to fall out of place, or could lead to leaks.)**
 - **Where corrosive gas like sulfurous gas exists. (Copper tubing and brazed spots may corrode which could eventually lead to refrigerant leaks.)**
 - **Where exposed to combustible gas and where volatile liquid like thinner or gasoline is used. (Gas in the vicinity of the unit could ignite.)**
 - **Where machines can generate electromagnetic waves. (Control system may malfunction.)**
 - **Where the air contains high levels of salt such as that near the ocean and where voltage fluctuates greatly such as that in factories.**
Also in vehicles or vessels.
- This unit, both indoor and outdoor, is suitable for installation in a commercial and light industrial environment.
If install as a household appliance it may cause electromagnetic interference.



2-1 PRECAUTIONS

- Be sure to read this manual before installing the unit.
- Entrust installation to the place of purchase or a qualified serviceman. Improper installation could lead to leaks and, in worse cases, electric shock or fire.
- Use only parts provided with the unit or parts satisfying required specifications. Unspecified parts could cause the unit to fall out of place, or could lead to leaks and, in worse cases, electric shock or fire.
- Be sure to mount an air filter (part to be procured in the field) in the suction air passage in order to prevent water leaking, etc.

2-2 ACCESSORIES

Check the following accessories are included with your unit. (Accessories are placed in the air outlet of unit.)

Name	Attached pipe	Insulation for fitting
Quantity	1	1 each
Shape	1)  (Only FXMQ200 · 250MFV1)	2) for liquid pipe  Inside diameter φ25.4 3) for gas pipe  Inside diameter φ31.8 (Only FXMQ125MFV1)

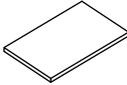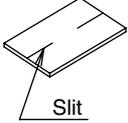Name	Sealing pad	Sealing pad
Quantity	1	4
Shape	4)  (Only FXMQ125MFV1)	5)  Slit

(Others)
6) Spring washer (M10) (2 pieces only for FXMQ200 · 250MFV1)
7) Hexagon head bolt (M10 × 40) (2 pieces only for FXMQ200 · 250MFV1)
8) Screws for flange connection (M5) (16 pieces for FXMQ125MFV1, 28 pieces for FXMQ200 · 250MFV1)
9) Washers (8 pieces)
10) Clamps (6 pieces)
11) Installation manual
12) Operation manual

2-3 OPTIONAL ACCESSORIES

- A wired remote controller is necessary for this unit separately.

NOTE

- If you wish to use a remote controller that is different from the above, select a suitable remote controller after consulting catalogs and technical materials.

FOR THE FOLLOWING ITEMS, TAKE SPECIAL CARE DURING CONSTRUCTION AND CHECK AFTER INSTALLATION IS FINISHED.

a. Items to be checked after completion of work

Items to be checked	If not properly done, what is likely to occur.	Check
Are the indoor and outdoor unit fixed firmly?	The units may drop, vibrate or make noise.	
Is the gas leak test finished?	It may result in insufficient cooling.	
Is the unit fully insulated?	Condensate water may drip.	
Does drainage flow smoothly?	Condensate water may drip.	
Does the power supply voltage correspond to that shown on the name plate?	The unit may malfunction or the components burn out.	
Are wiring and piping correct?	The unit may malfunction or the components burn out.	
Is the unit safely grounded?	It may result in electric shocks.	
Is wiring size according to specifications?	The unit may malfunction or the components burn out.	
Is something blocking the air outlet or inlet of either the indoor or outdoor units?	It may result in insufficient cooling.	
Are refrigerant piping length and additional refrigerant charge noted down?	The refrigerant charge in the system is not clear.	

Also review the "SAFETY CONSIDERATIONS"

b. Items to be checked at time of delivery

Items to be checked	Check
Did you explain about operations while showing the instruction manual to your customer?	
Did you hand the instruction manual over to your customer?	

c. Points for explanation about operations

The items with ⚠ WARNING and ⚠ CAUTION marks in the instruction manual are the items pertaining to possibilities for bodily injury and material damage in addition to the general usage of the product. Accordingly, it is necessary that you make a full explanation about the described contents and also ask your customers to read the instruction manual.

2-4 NOTE TO INSTALLER

- Be sure to instruct customers how to properly operate the unit (especially cleaning filters, operating different functions, and adjusting the temperature) by having them carry out operations themselves while looking at the manual.
- Do not use in seaside locations with a lot of salt in the air, factories and other locations where the voltage fluctuates, in automobiles, or in marine vessels.

3. SELECTING INSTALLATION SITE

When it may exceed 30°C and RH80% in the ceiling or fresh air is inducted into the ceiling, an additional insulation (Thickness 10mm or more of glasswool or polyethylene form) is required.

- (1) Select an installation site where the following conditions are fulfilled and that meets with your customer's approval.
 - Where is resistible against weight of the unit.
 - In the upper space (including the back of the ceiling) of the unit where there is no possible dripping of water from the refrigerant pipe, drain pipe, water pipe, etc.
 - Where optimum air distribution can be ensured.
 - Where nothing blocks the air passage.

- Where condensate can be properly drained.
- If supporting structural members are not strong enough to take the unit's weight, the unit could fall out of place and cause serious injury.
- Where the false ceiling is not noticeably on an incline.
- Where there is no risk of combustible gas leakage.
- Where sufficient clearance for maintenance and service can be ensured. **(Refer to Fig. 1)**
- Where the total piping length involving indoor unit and outdoor unit is below the allowable piping length. (See the installation manual included with the outdoor unit for "6. REFRIGERANT PIPING.")
- Locations where a maintenance hole can be installed. **(Refer to Fig. 2)**

⚠ CAUTION

- Install the indoor and outdoor units, power supply wires and transmission wires at least 1 meter away from televisions or radios in order to prevent image interference or noise. (Depending on the radio waves, a distance of 1 meter may not be sufficient enough to eliminate the noise.)

- (2) Use suspension bolts for installation. Check whether the ceiling is strong enough to support the weight of the unit or not. If there is a risk, reinforce the ceiling before installing the unit.


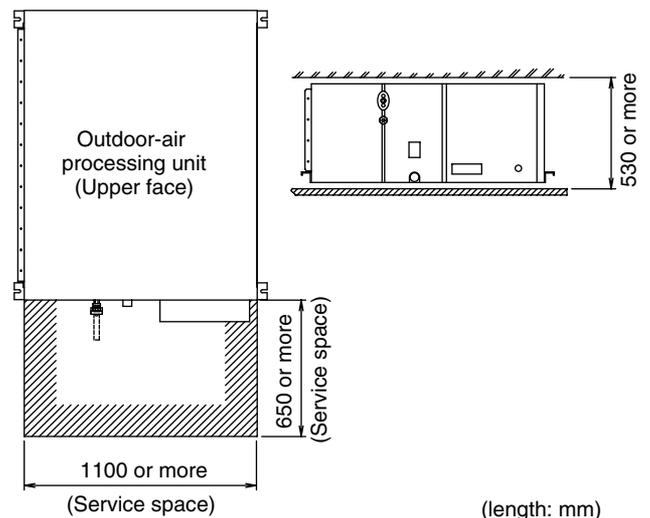


Fig. 1

4. PREPARATIONS BEFORE INSTALLATION

(1) Relative positions of the unit and suspension bolt. (Refer to Fig. 2)

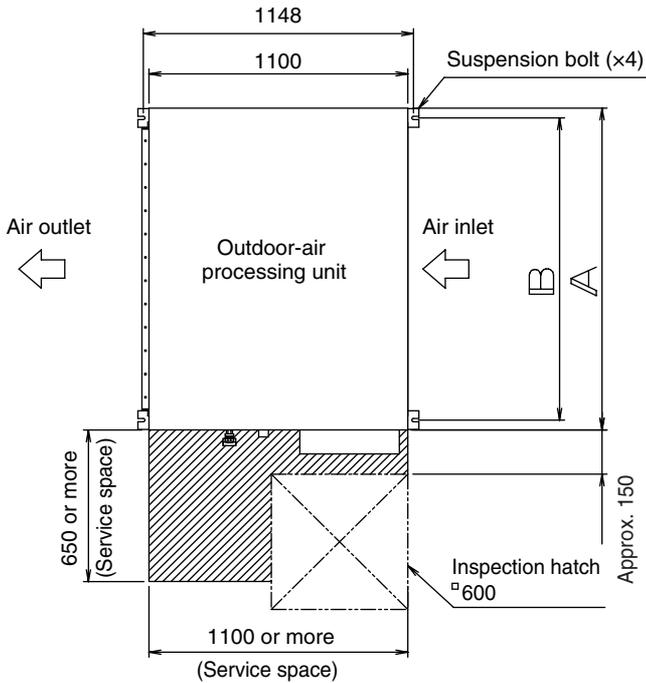


Unit	A	B
FXMQ125MFV1	744	685
FXMQ200-250MFV1	1380	1296

Fig. 2 (length: mm)

- (2) Install a canvas duct to the air outlet and air inlet so that vibration from the unit isn't transmitted to the duct or ceiling. You should also apply acoustic (insulation material) to the inside of the duct, and vibration insulation rubber to the suspension bolts.
- (3) Open the installation hole. (Pre-set ceilings)
 - Once the installation hole is opened in the ceiling where the unit is to be installed, pass refrigerant and drain pipe and the power supply, transmission, and remote controller wire to the unit's pipe and wire connection ports. (See the chapter 6, 7, 9 for details.)
 - After opening the ceiling hole, it might be necessary to reinforce the ceiling frame to prevent shaking or to maintain the levelness of the ceiling. Consult an architect or carpenter for details.
- (4) Install suspension bolts. (Use bolts of 10 mm diameter.)
 - Install the unit where supporting structures are strong enough to bear the unit's weight. Use embedded inserts or anchor bolts with new buildings and hole-in-anchors with old buildings. Adjust the distance to the ceiling beforehand.

< Installation example >

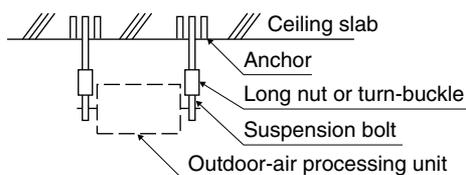

Note) All the above parts are field supplied.

Fig. 3

5. UNIT INSTALLATION

Installing optional accessories before installing the unit is easier. See the installation manuals included with the optional accessories.

As for the parts to be used for installation work, be sure to use the provided accessories and specified parts designated by our company.

- (1) Temporarily install the unit.
 - Mount the hanger brackets to suspension bolts. Secure the hanger brackets on the top and the bottom with nuts <1>~<3> (M10, field supplied) and washers (M10, accessory 9).

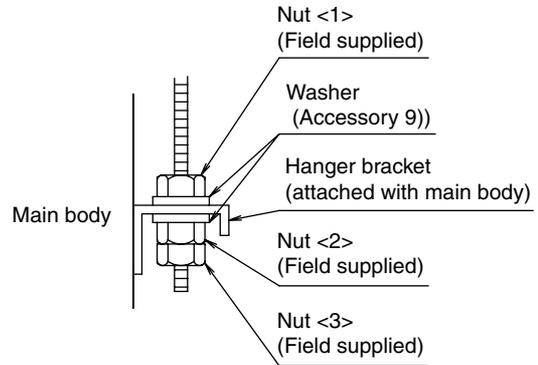


Fig. 4

- (2) Adjust the height of the unit with the nut <2>. (Refer to Fig. 4)
- (3) Make sure the unit is level.
 - Use a level or a vinyl tube filled with water to make sure that the unit is level and that the tilt (downward slope) to the drain socket and air inlet side is within 1°.

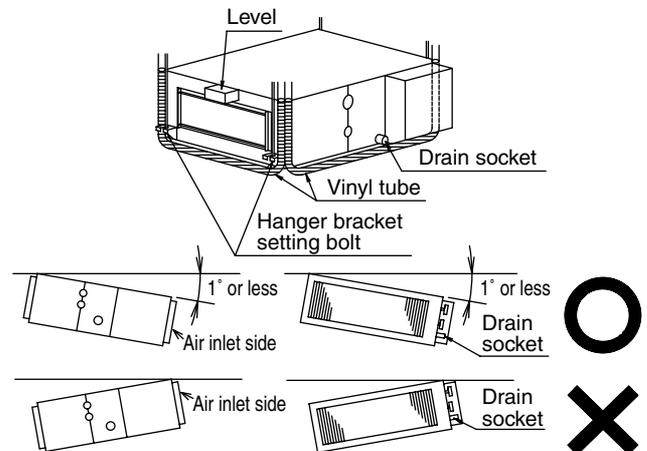


Fig. 5

- (4) Tighten both upper and lower nuts <1>, <3>. (Refer to Fig. 4)
- (5) Insulate the four hanger brackets with the sealing pad. (accessory 5) Insulate the hanger brackets so that the surface and edges of the hanger brackets cannot be seen. (Refer to Fig. 6)

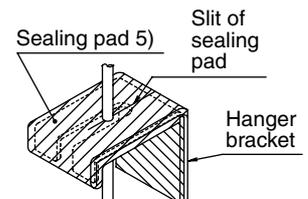


Fig. 6

CAUTION

Setting the unit at an angle opposite to the drain socket or air inlet side might cause leaks.

6. REFRIGERANT PIPING

(For refrigerant piping between outdoor unit and this unit, see the installation manual attached to the outdoor unit.)

(Refer to Table 1))

(Execute heat insulation work completely on both sides of the gas pipe and the liquid pipe. Otherwise, a water leakage can result sometimes.)

(When using a heat pump, the temperature of the gas pipe can reach up to approximately 120°C, so use insulation which is sufficiently resistant.)

(Improve the insulation on the refrigerant piping depending on the installation environment. If the insulation is not sufficient, condensate may form on the surface of the insulation.)

(Before refrigerant piping work, check which type of refrigerant is used. Proper operation is not possible if the types of refrigerant are not the same.)

CAUTION


- Use a pipe cutter and flare suitable for the type of refrigerant.
- Apply ester oil or ether oil around the flare portions before connecting. (Refer to Fig. 7)
- To prevent dust, moisture or other foreign matter from infiltrating the tube, either pinch the end or cover it with tape.
- Do not allow anything other than the designated refrigerant to get mixed into the refrigerant circuit, such as air, etc. If any refrigerant gas leaks while working on the unit, ventilate the room thoroughly right away.

- The outdoor unit is charged with refrigerant.
- Be sure to use both a spanner and torque wrench together, as shown in the drawing, when connecting or disconnecting pipes to/from the unit. (Refer to Fig. 8)
- Refer to Table 2 for the dimensions of flare nut spaces.
- When connecting the flare nut, coat the flare section (both inside and outside) with ester oil or ether oil, rotate three or four times first, then screw in. (Refer to Fig. 7)
- Refer to Table 2 for tightening torque.

Table 1

Unit to be connected	Gas pipe diameter	Liquid pipe diameter
FXMQ125MFV1	φ15.9	φ9.5
FXMQ200MFV1	φ19.1 Use attached pipe.	φ9.5
FXMQ250MFV1	φ22.2 Use attached pipe.	φ9.5

Table 2

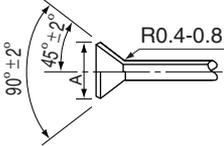Pipe size	Tightening torque	Flare dimensions A (mm)	Flare shape
φ 9.5 (3/8")	32.7 – 39.9N·m (333 – 407 kgf·cm)	12.8 – 13.2	
φ 15.9 (5/8")	61.8 – 75.4N·m (630 – 770 kgf·cm)	19.3 – 19.7	

NOTE

Use the flare nuts attached with the unit.

CAUTION

Over-tightening may damage the flare and cause a refrigerant leakage.

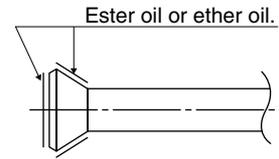


Fig. 7

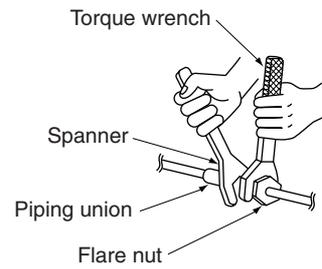


Fig. 8

Not recommendable but in case of emergency

You must use a torque wrench but if you are obliged to install the unit without a torque wrench, you may follow the installation method mentioned below.

After the work is finished, make sure to check that there is no gas leak.

When you keep on tightening the flare nut with a spanner, there is a point where the tightening torque suddenly increases. From that position, further tighten the flare nut the angle shown below:

Table 3

Pipe size	Further tightening angle	Recommended arm length of tool
φ 9.5 (3/8")	60 to 90 degrees	Approx. 200mm
φ 15.9 (5/8")	30 to 60 degrees	Approx. 300mm

- After checking the pipe-connection for gas leakage, be sure to insulate the liquid and gas pipe, referring to Fig.9, 10 and the following points.

FXMQ125MFV1

1. Insulate the liquid and gas pipes using the insulation for fitting (Accessory 2), 3)) (Tighten both edges with clamping material.)
2. Make sure the insulation for fitting (Accessory 3)) on the gas pipe has its seams facing up.
3. For the gas pipe, wrap the sealing pad (Accessory 4)) around the insulation for fitting (Accessory 3)) (flare nut part).

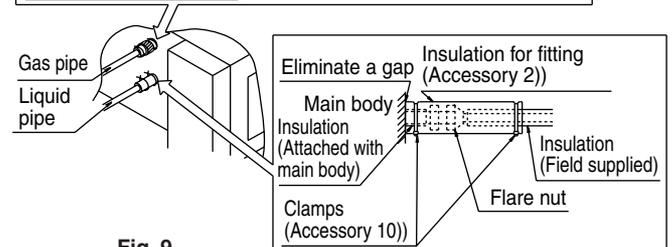
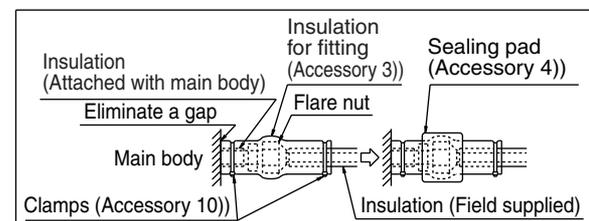


Fig. 9

FXMQ200 · 250MFV1

1. Insulate the liquid pipe using the insulation for fitting (Accessory 2)). (Tighten both edges with clamping material.)
2. Use the attached pipe (Accessory 1)) for connecting the gas pipes and make sure to insulate the gas pipes (using field supplied insulation) all the way to the base where they connect to the unit.
3. The turning torque of the hexagon head bolts (Accessory 7)) to connect the attached pipe (Accessory 1)) to the unit is 21.5 – 28.9 N/m.

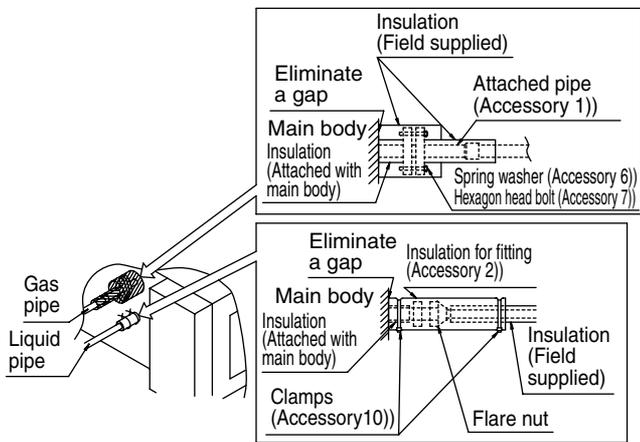


Fig. 10

CAUTION

Be sure to insulate any field pipe all the way to the pipe connection inside the unit. Any exposed pipe may cause condensate or burns if touched.

CAUTION

CAUTION TO BE TAKEN WHEN BRAZING REFRIGERANT PIPING
Do not use flux when brazing refrigerant piping. Therefore, use the phosphor copper brazing filler metal (BCuP-2: JIS z 3264/B-Cu93P-710/795: ISO 3677) which does not require flux.

(Flux has extremely harmful influence on refrigerant piping systems. For instance, if the chlorine based flux is used, it will cause pipe corrosion or, in particular, if the flux contains fluorine, it will damage the refrigerant oil.)

- Before brazing local refrigerant piping, nitrogen gas shall be blown through the piping to expel air from the piping. If your brazing is done without nitrogen gas blowing, a large amount of oxide film develops inside the piping, and could cause system malfunction.
- When brazing the refrigerant piping, only begin brazing after having carried out nitrogen substitution or while inserting nitrogen into the refrigerant piping. Once this is done, connect the unit with a flared or a flanged connection.
- Nitrogen should be set to 0.02 MPa (0.2 kg/cm²) with a pressure-reducing valve if brazing while inserting nitrogen into the piping.

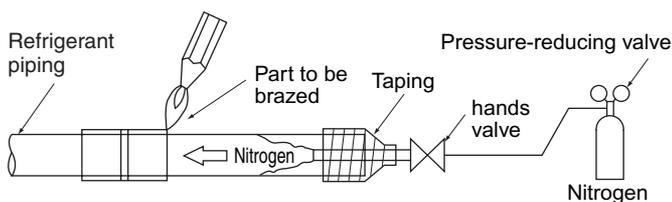


Fig. 11

7. DRAIN PIPING WORK

«Rig the drain pipe as shown below and take measures against condensate. Improperly rigged piping could lead to leaks and eventually wet furniture and belongings.»
«Insulate the drain pipes inside the building and the drain sockets.»

- (1) Carry out the drain piping.
 - The drain pipe should be short with a downward slope lower than 1/100 and should prevent air pockets from forming.
 - The diameter of the pipe is the same as that of the connecting pipe (PS1B), and should be kept equal to or greater than that of the connecting pipe.

NOTE

- If converging multiple drain pipes, install according to the procedure shown below. (Select an appropriate central drain pipe thickness for the units they will be connected to.)

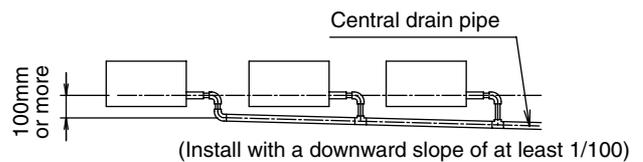


Fig. 12

- (2) After piping work is finished, check drainage flow smoothly.
 - Open the water supply port, add approximately 1 litre of water slowly into the drain pan and check drainage flow. (Refer to Fig. 13)
- Pools of drainage can cause the drain pipes to clog.

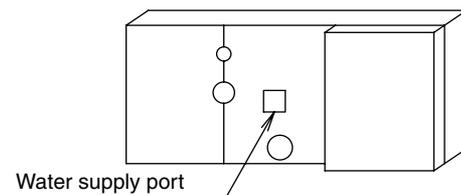


Fig. 13

CAUTION

- Do not connect the drain pipe directly to sewage pipes that smell of ammonia. The ammonia in the sewage might enter the unit through the drain pipes and corrode the heat exchanger.

8. INSTALLING THE DUCT

- Connect the duct (field supplied) as shown below.
(Refer to Fig. 14)

<Air inlet side>

- Connect the duct to the inlet flange (field supplied).
- Wrap the inlet flange and the duct connection with aluminum tape or something similar to prevent air escaping.

<Air outlet side>

- Connect the duct to the outlet flange (attached with main body).
- Wrap the outlet flange and the duct connection with aluminum tape or something similar to prevent air escaping.
- Connect the outlet flange and the unit using the screws (accessory 8)).

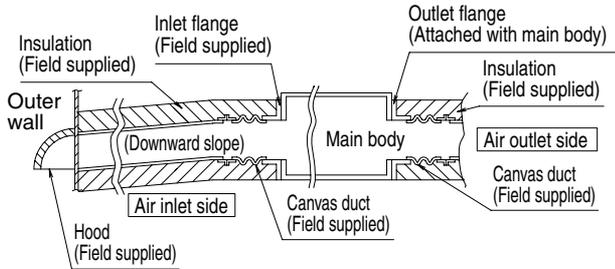


Fig. 14

NOTES

- Air filter is not standard accessory, but please mount it in the duct system of the air inlet side. Select its colorimetric method (gravity method) 50% or more.
- Make sure there is a downward slope on the air inlet side of the duct. This is to prevent rainwater from getting inside the unit.
- Connect the duct so that the unit draws in outside air in the inlet side. Otherwise, the unit may not work.
- Insulate the duct to prevent condensate from forming. (Material: glass wool or polyethylene foam, 25 mm thick)
- Use electric insulation between the duct and the wall when using metal ducts to pass metal or wire laths or metal plating into wooden buildings.

9. ELECTRIC WIRING WORK

9-1 GENERAL INSTRUCTIONS

- All field supplied parts and materials and electric works must conform to local codes.
- Use copper wire only.
- For electric wiring work, refer to also "WIRING DIAGRAM" label attached to the electric parts box lid.
- For remote controller wiring details, refer to the installation manual attached to the remote controller.
- All wiring must be performed by an authorized electrician.
- This system consists of multiple indoor units. Mark each indoor unit as unit A, unit B..., and be sure the terminal board wiring to the outdoor unit is properly matched. If wiring and piping between the outdoor unit and the indoor unit are mismatched, the system may cause a malfunction.
- A circuit breaker capable of shutting down power supply to the entire system must be installed.
- Refer to the installation manual attached to the outdoor unit for the size of power supply wire connected to the outdoor unit, the capacity of the circuit breaker and switch, and wire instructions.
- Be sure to ground the unit.
- Do not connect the ground wire to gas and water pipes, lightning rods, or telephone ground wires.
 - Gas pipes : might cause explosions or fire if gas leaks.
 - Water pipes : no grounding effect if hard vinyl piping is used.
 - Telephone ground wires or lightning rods : might cause abnormally high electric potential in the ground during lightning.

9-2 ELECTRICAL CHARACTERISTICS

Model	Units			Power supply		Fan motor	
	Hz	Volts	Voltage range	MCA	MFA	kW	FLA
FXMQ125MFV1	50	220-240	Max. 264 Min. 198	1.9	15	0.380	1.5
FXMQ200MFV1				3.3	15	0.380	2.6
FXMQ250MFV1				3.8	15	0.380	3.0

MCA: Min. Circuit Amps (A); MFA: Max. Fuse Amps (A)
kW: Fan Motor Rated Output (kW); FLA: Full Load Amps (A)

9-3 SPECIFICATIONS FOR FIELD SUPPLIED FUSES AND WIRE

Model	Power supply wire			Remote controller wire Transmission wire	
	Field fuses	Wire	Size	Wire	Size
FXMQ125MFV1	15A	H05VV-U3G	Size must comply with local codes.	Sheathed wire (2 wire)	0.75 -
FXMQ200MFV1					1.25
FXMQ250MFV1					mm ²

NOTES

1. Select the particular size of electrical wire for power supply wire in accordance with the standards of the given nation and region.
2. Allowable length of transmission wire between indoor/outdoor units and between the indoor unit and the remote controller is as follows.
 - (1) Outdoor unit – Indoor unit:
Max. 1000 m (Total wiring length: 2000 m)
 - (2) Indoor unit – Remote controller:
Max. 500 m
 - (3) Max. branches No. of branches :16
3. Insulated thickness: 1mm or more
4. Up to 16 branches are possible for unit-to unit cabling. No branch is allowed after first branch. (Refer to Fig. 15)

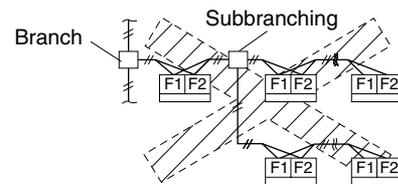


Fig. 15

10. WIRING EXAMPLE AND HOW TO SET THE REMOTE CONTROLLER

10-1 HOW TO CONNECT THE WIRES

(Remove the electric parts box lid and wire as shown in the figure 16, 17.)

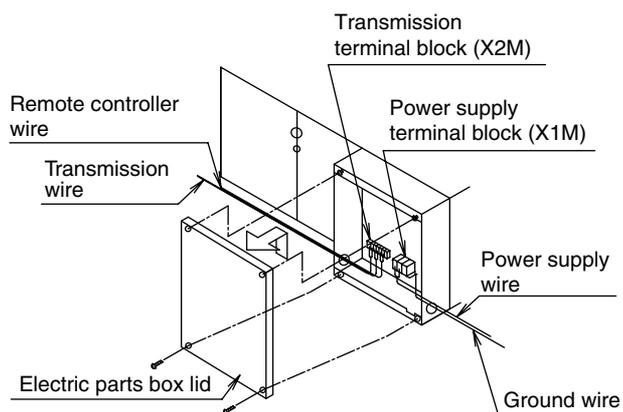


Fig. 16

- **Power supply wire, Ground wire (Refer to Fig. 17)**
Connect the wire to L and N on the power supply terminal block (X1M). Also, connect the ground wire to the ground terminal. Take the power supply wire and the ground wire into the unit through the wiring through hole <1>, and firmly secure them together using the clamp (Accessory 10)).
- **Transmission wire, Remote controller wire (Refer to Fig. 17)**
Connect the transmission wire to F1 and F2 on the transmission terminal block (X2M). Connect the remote controller wire to P1 and P2 on the transmission terminal block (X2M). Take them into the unit through the wiring through hole <2>, and firmly secure the wires using the clamp (Accessory 10)).

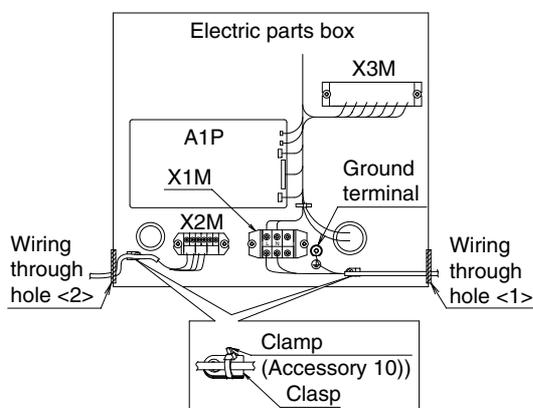


Fig. 17




CAUTION

- Wire the electric parts box so that the wiring is at least 10 mm above the bottom of the electric parts box.
- Be sure to attach the sealing material or putty (field supplied) to the wiring through holes to prevent the infiltration of water as well as any insects and other small creatures from outside. Otherwise a short-circuit may occur inside the electric parts box.
- When clamping the wires, be sure no pressure is applied to the wire connections by using the included clamping material to make appropriate clamps. Also, when wiring, make sure the lid on the electric parts box fits snugly by arranging the wires neatly and attaching the electric parts box lid firmly. When attaching the electric parts box lid, make sure no wires get caught in the edges. Pass wire through the wiring through holes to prevent damage to them.

- Make sure the remote controller wire, the transmission wire and power supply wire, ground wire do not pass through the same locations outside of the unit, separating them by at least 50mm, otherwise electrical noise (external static) could cause mistaken operation or breakage.

[PRECAUTIONS]

1. Use round crimp-style terminals for connecting wires to the power supply terminal block.
If unavailable, observe the following points when wiring.
 - Do not connect wires of different gauge to the same power supply terminal.
(Looseness in the connection may cause overheating.)
 - Use the specified electric wire. Connect the wire securely to the terminal. Lock the wire down without applying excessive force to the terminal.

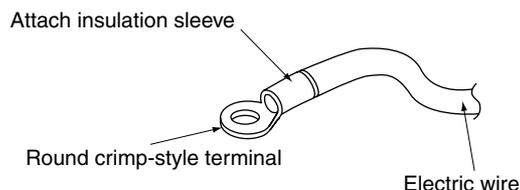

2. **Tightening torque for the terminal screws.**
 - Use the correct screwdriver for tightening the terminal screws. If the blade of screwdriver is too small, the head of the screw might be damaged, and the screw will not be properly tightened.
 - If the terminal screws are tightened too hard, screws might be damaged.
 - Refer to the table below for the tightening torque of the terminal screws.

Terminal	Size	Tightening torque
Transmission terminal block (X2M)	M3.5	0.79 – 0.97 N·m
Power supply terminal block (X1M)	M4	1.18 – 1.44 N·m
Ground terminal	M5	3.02 – 4.08 N·m

3. Do not connect wires of different gauge to the same ground terminal. Looseness in the connection may deteriorate protection.
4. Outside of the unit, keep transmission wire and remote controller wire at least 50 mm away from power supply wire and ground wire. The unit may malfunction if subjected to electrical noise (external static).
5. For remote controller wiring, refer to the "INSTALLATION MANUAL OF REMOTE CONTROLLER" attached to the remote controller.
6. **Never connect power supply wire to the transmission terminal block (X2M). A mistake of the sort could damage the entire system.**
7. Use only specified wire and tightly connect wires to terminals. Be careful wires do not place external stress on terminals. Keep wiring in neat order and so as not to obstruct other equipment such as the electric parts box lid. Make sure the lid closes tight. Incomplete connections could result in overheating, and in worse case, electric shock or fire.

10-2 WIRING EXAMPLE

- Fit the power supply wiring of each unit with a switch and fuse as shown in the drawing.

COMPLETE SYSTEM EXAMPLE (3 SYSTEMS)

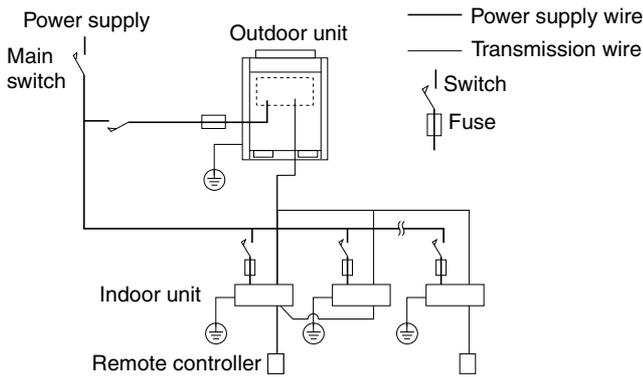


Fig. 18

1. When using 1 remote controller for 1 indoor unit. (Normal operation)

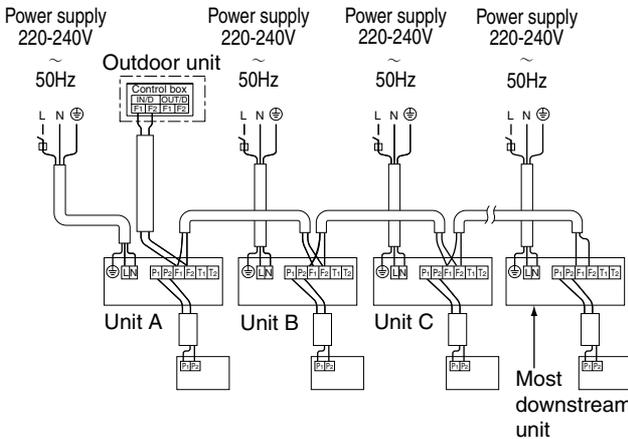


Fig. 19

2. For group control or control by 2 remote controllers

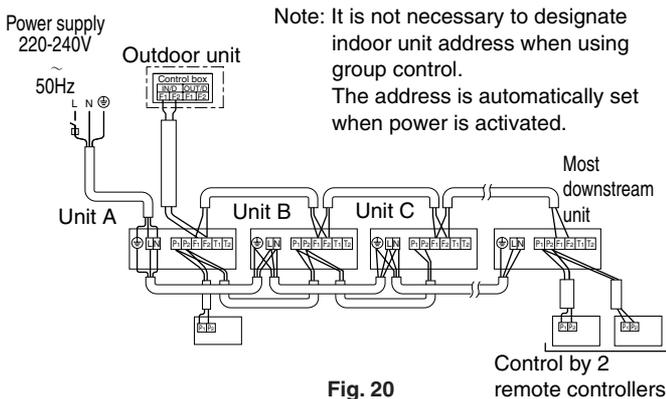


Fig. 20

[PRECAUTIONS]


- A single switch can be used to supply power to units on the same system. However, branch switches and branch circuit breakers must be selected carefully.

10-3 CONTROL BY 2 REMOTE CONTROLLERS (Controlling 1 indoor unit by 2 remote controllers)

- When using 2 remote controllers, one must be set to "MAIN" and the other to "SUB".


MAIN/SUB CHANGEOVER

- Insert a ⊖ screwdriver into the recess between the upper and lower part of remote controller and, working from the 2 positions, pry off the upper part.
(The remote controller PC board is attached to the upper part of remote controller.)

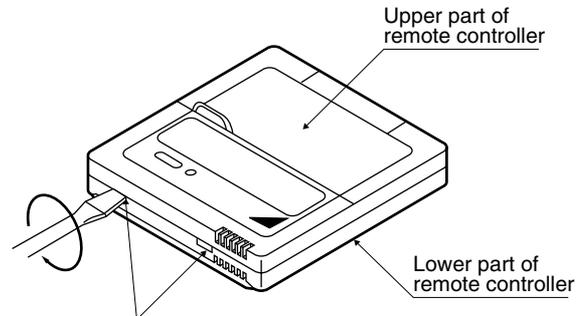

Insert the screwdriver here and gently work off the upper part of remote controller.

- Turn the MAIN/SUB changeover switch on one of the two remote controller PC boards to "S".
(Leave the switch of the other remote controller set to "M".)

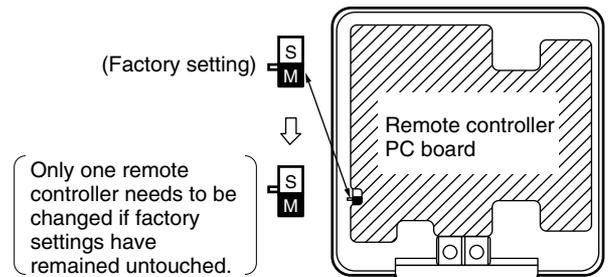


Wiring Method (See 10-1.)

- Remove the electric parts box lid.
- Add the second remote controller (slave) to the transmission terminal block (X2M/P1, P2) in the electric parts box. (There is no polarity.)
(Refer to Fig. 20 and 9-3.)

10-4 COMPUTERISED CONTROL (FORCED OFF AND ON/OFF OPERATION)

- Wire specifications and how to perform wiring
 - Connect the input from outside (Input A) to terminals T1 and T2 of the transmission terminal block (X2M).

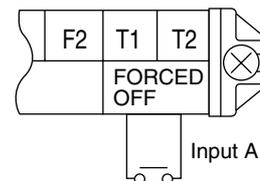

Wire specification	Sheathed vinyl cord or cable (2 wire)
Size	0.75 - 1.25 mm ²
Length	Max. 100 m
External terminal	Contact that can ensure the minimum applicable load of 15 V DC, 1 mA.

(2) Actuation

- The following table explains FORCED OFF and ON/OFF OPERATION in response to Input A.

FORCED OFF	ON/OFF OPERATION
Input A "ON" stops operation (impossible by remote controllers.)	Input A OFF → ON turns ON unit.
Input A OFF enables control by remote controller.	Input A ON → OFF turns OFF unit.

(3) How to select FORCED OFF and ON/OFF OPERATION

- See "11. FIELD SETTING"

10-5 CENTRALIZED CONTROL

- For centralized control, it is necessary to designate the group No. For details, refer to the manual of each optional controllers for centralized control.

11. FIELD SETTING

11-1 How to set


(1) Make sure the electric parts box lids are closed on the indoor and outdoor units.

(2) After the power is turned on, following the operation manual and designate the master remote controller using the remote controller.

- When setting the unit, ask the customer which remote controller he wants to designate as the master remote controller.
- See also the operation manual included with the outdoor unit.

(3) Field setting must be made from the remote controller in accordance with the installation condition.

- Setting can be made by changing the "Mode No.", "FIRST CODE NO.", and "SECOND CODE NO."
- Set the remote controller to the field set mode. For details, refer to the "HOW TO SET IN THE FIELD", in the remote controller manual. Lastly, make sure the customer keeps the "FIELD SETTING" manual, along with the operation manual, in a safe place.

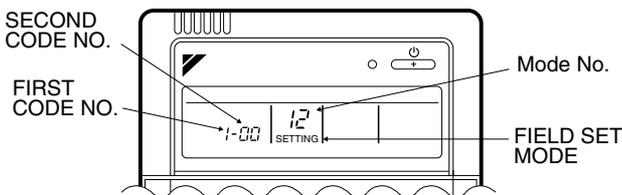

11-2 How to select FORCED OFF and ON/OFF OPERATION

- When in the field set mode, select mode No. 12, then set the first code (switch) No. to "1". Then set second code (position) No. to "01" for FORCED OFF and "02" for ON/OFF OPERATION. (FORCED OFF at factory set)

11-3 Setting air filter sign

- Remote controllers are equipped with liquid crystal display air filter signs to display the time to clean air filters.
- Change the SECOND CODE NO. according to Table 4 depending on the amount of dirt or dust in the room. (SECOND CODE NO. is factory set to "01" for filter contamination-light)

Table 4

Setting	Spacing time of display air filter sign (long life type)	Mode No.	FIRST CODE NO.	SECOND CODE NO.
Air filter contamination-light	Approx. 2500 hrs	10 (20)	0	01
Air filter contamination-heavy	Approx. 1250 hrs			02

11-4 Setting air discharge temperature

- Change the SECOND CODE NO. according to Table 5 depending on user's need. (SECOND CODE NO. is set to "06" for cooling "08" for heating at factory set)

Table 5

		for cooling	for heating
Mode No.		14 (24)	14 (24)
FIRST CODE NO.		3	4
SECOND CODE NO.	01	13°C	18°C
	02	14°C	19°C
	03	15°C	20°C
	04	16°C	21°C
	05	17°C	22°C
	06	18°C	23°C
	07	19°C	24°C
	08	20°C	25°C
	09	21°C	26°C
	10	22°C	27°C
	11	23°C	28°C
	12	24°C	29°C
	13	25°C	30°C

NOTE

Air discharge temperature is not displayed on remote controller.

12. TEST OPERATION

Refer to the installation manual of the outdoor unit.

- The operation lamp of the remote controller will flash when a malfunction occurs. Check the malfunction code on the liquid crystal display to identify the point of trouble. An explanation of malfunction codes and the corresponding trouble is provided in installation manual of the outdoor unit.

If any of the items in Table 6 are displayed, there may be a problem with the wiring or power supply, so check the wiring again.

Table 6

Remote control display	Content
" [Symbol] " is lit up	• There is a short circuit at the FORCED OFF terminals (T1, T2)
"U3" is lit up	• Test operation is not completed.
"U4" is lit up "UH" is lit up	<ul style="list-style-type: none"> The power on the outdoor unit is off. The outdoor unit has not been wired for power supply. Incorrect wiring for the transmission wire and / or FORCED OFF wire. The transmission wire is cut.
No display	<ul style="list-style-type: none"> The power on the indoor unit is off. The indoor unit has not been wired for power supply. Incorrect wiring for the remote controller wire, the transmission wire and / or the FORCED OFF wire. The remote controller wire is cut.

